

**USER'S MANUAL**



**X200**

**Digital Voice Recorder**

## TABLE OF CONTENTS

 
 

<b>INTRODUCTION</b>	<b>5</b>
<b>QUICK START GUIDE</b>	<b>7</b>
<b>BASIC OPERATION GUIDE</b>	<b>9</b>
Power On/Off	9
Recording files	9
Deleting files	10
Transferring files to a computer	12
Playback of recordings and audio files	12
Playback of recordings	13
Playback of audio files	13
Next/Previous and Fast forward/Fast backward	14
Volume Settings	14
A-B repeat function	14
HARD RESET	16
<b>MENU OPTIONS</b>	<b>17</b>
<b>Recordings</b>	<b>17</b>
Recording Library	17
Record Format	18
Bitrate	18
Mic Sensitivity	19

Recording Monitor	20
Autosave	20
VOR Mode	21
Auto Record	24
<b>Settings</b>	27
Standby Mode	27
Backlight	28
Date and Time	28
Password switch	30
Change Password	30
Language	31
Information	31
Format Device	32
Factory Settings	32
<b>Music</b>	33
Last played	33
All Songs	34
Artists	39
Albums	39
<b>Folders</b>	40
<b>Ebook</b>	40
<b>TROUBLESHOOTING</b>	<b>41</b>


<b>MAINTENANCE</b>	<b>43</b>
Charging	43
Safety rules	44
Recycling	45
Specifications	46
<b>THANK YOU</b>	<b>47</b>

## INTRODUCTION

Thank you for purchasing a DICTOPRO X200 Digital Voice Recorder. If for any reason you are not completely satisfied with your purchase or have any questions, please visit [www.DICTOPRO.com/contact\\_us](http://www.DICTOPRO.com/contact_us). We care about our customers more than anything and are always here to serve you.

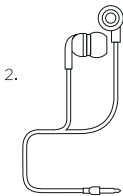

1. DICTOPRO X200
2. Earphones
3. Gift bag
4. Charging/Data cable
5. User Manual

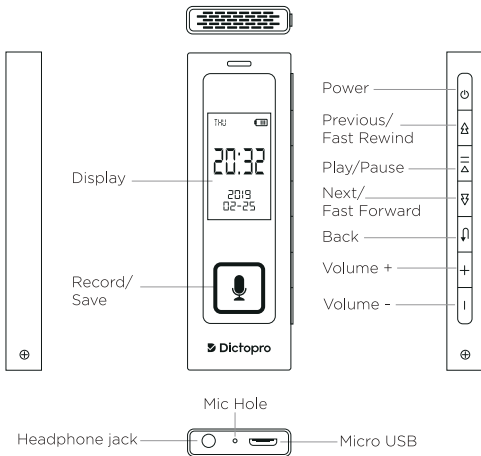

## QUICK START GUIDE

Function	Operation
<b>Power ON</b>	Press and hold the <b>POWER</b> button for 2 seconds. You will see the "WELCOME" message and the device will turn ON.
<b>Power OFF</b>	Press and hold the <b>POWER</b> button for 3 seconds. You will see the 1, 2, 3 countdown and the "BYE" message on the screen, then the device will turn OFF.
<b>Recording</b>	Press and hold the <b>REC</b> button for 2 seconds. You will see the "Please wait..." message and the recording will start.
<b>Pause recording</b>	While recording press the <b>PLAY</b> button one time.
<b>Stop recording</b>	Press the <b>REC</b> button for 2 seconds, the recording will stop and save.
<b>Play</b>	Press the <b>PLAY</b> button to playback the saved recording or another audio file.

<b>Function</b>	<b>Operation</b>
<b>Pause</b>	While playing the record or audio file press the <b>PLAY</b> button one time.
<b>Play Next</b>	Press <b>NEXT</b> while playing the file.
<b>Play Previous</b>	Press <b>PREVIOUS</b> while playing the file.
<b>Fast forward</b>	Press and hold <b>NEXT</b> while playing the file (as long as necessary).
<b>Fast backward</b>	Press and hold <b>PREVIOUS</b> while playing the file (as long as necessary).
<b>Volume +</b>	Press <b>+</b> button while playing the file.
<b>Volume -</b>	Press <b>-</b> button while playing the file.
<b>Go back</b>	Press the <b>BACK</b> button to go back to the previous screen / Menu section.



## BASIC OPERATION GUIDE

### POWER ON/OFF

Press and hold the **POWER** button for 2 seconds, and the device will turn ON. (If the device is not being used for more than 2minutes, it will turn to Standby Mode automatically by default. Please refer to the Standby timer section of this manual.)

 
Press and hold the **POWER** button for 3 seconds, and the device will turn OFF.



### RECORDING FILES

**1)** Place the Recorder in a way so that its built-in microphone (bottom part of recorder) is pointed toward the recording source. Press and hold the **REC** button for 2 seconds. You will see the “Please wait...” message, then the recording will start.

**2)** During the recording, the peak meters appear to help you adjust the recording settings. We recommend to adjust the distance from the sound source, or the sensitivity setting of the microphone so that the recording level stays within-12 dB, which fits within the optimum range.



(Please refer to the **Recording Settings** section of this manual for detailed instructions.)

**3)** Press **PLAY** to pause the recording. Press **PLAY** again to continue the recording.

**4)** Press the **REC** button for over 1 second to stop and save the recording.

## DELETING FILES

**Note:** Once a file is deleted, you CAN NOT restore it.

There are 2 ways: one way is to delete the recording recordings, other way is to delete audio file/files.



**Option 1:** Delete recording/recordings.

**1)** Use the **NEXT** and **PREVIOUS** buttons to navigate to the **Recordings** menu. Press **PLAY**, and you will hit the **Recordings Library**.

**2)** Select the recorded file you want to delete and press **PLAY**.

**3)** Listen to the recording as long as you need to make sure that you want to delete this particular recording.

 **4)** Press and hold the **PLAY** button for 1 second. The Options menu will display.

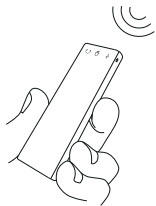

5) Select **Delete** if you want to delete this particular recording, or select **Delete all** to delete all recordings and press **PLAY**.

6) Select **YES** and press **PLAY** to confirm.

7) The recording/recordings will be deleted.

**Option 2:** Delete one/all audio files.

1) By using the **NEXT** and **PREVIOUS** buttons navigate to the **Music** menu. Press the **PLAY** button, and you will hit **All Songs**. Press **PLAY** to see the list of audio files.

2) Select an audio file and press **PLAY**.

3) Listen to the song for 1 second.

 
4) Press and hold the **PLAY** button for 1 second. The Options menu will display.

5) Select **Delete** if you want to delete this particular song or **Delete all** to delete all audio files and press **PLAY**.

6) Select **YES** and press **PLAY** to confirm.

7) One song or all music will be deleted.

**Note:** The easiest way to manage files and folders and to delete them is to connect X200 to a computer as a USB Flash memory.



## TRANSFERRING FILES TO A COMPUTER

 
You can transfer the files and folders from your DICTOPRO X200 to a computer and back.

- 1) Connect the X200 to your computer using the supplied Micro-USB cable.
- 2) The DICTOPRO X200 will appear in your Computer Menu as an external drive (just like an ordinary flash-drive).
- 3) Drag and drop the files or folders you want to edit, delete, or copy from or to the X200 (just like an ordinary flash-drive).
- 4) Disconnect your Recorder from the computer by following the specific instructions of disconnecting external drives for your OS.

**Note:** Please do not disconnect the X200 by removing the Micro-USB data cable. This can damage the files stored in the Recorder's internal memory.

## PLAYBACK OF RECORDINGS AND AUDIO FILES

You can playback both recordings and audio files stored on the DICTOPRO X200 via the device's speaker, or by using the supplied earphones.





## 1. Playback of recordings

1) By using the **NEXT** and **PREVIOUS** buttons, find **Recordings** and press **PLAY**. You will hit **Recording Library**.

2) Press **PLAY** to open the list of all available recordings.

3) By using the **NEXT** and **PREVIOUS** buttons, select the recording/audio file you need.

  4) Press **PLAY** to start the playback.




## 2. Playback of audio files

1) By using the **NEXT** and **PREVIOUS** buttons, find **Music** and press **PLAY**.

2) From the list of options, select **All Songs** and press **PLAY**.

3) By using the **NEXT** and **PREVIOUS** buttons, select the necessary audio file.

 4) Press **PLAY** to start the playback.




### 3. Next/Previous and Fast forward/Fast backward

Press **NEXT** while playing the file to switch to the NEXT recording/audio file.

Press **PREVIOUS** while playing the file to switch to the PREVIOUS recording/audio file.

Press and hold **NEXT** while playing the file (as long as necessary) to FAST FORWARD.

 Press and hold **PREVIOUS** while playing the file (as long as necessary) to FAST BACKWARD.



### 4. Volume Settings

Press **+** or **-** while playing the file to adjust the volume.

 
### 5. A-B repeat function

1. You can choose how many times to reproduce the A-B slot, from 1 to 10. The default value is 5.

To set up the **number** of A-B cycles:

1) During the playback, press and hold **PLAY** for two seconds. The Options menu will appear.

2) By using the **NEXT** and **PREVIOUS** buttons, find **Repeat Settings** and press **PLAY**.



3) By using the **NEXT** and **PREVIOUS** buttons, choose **Repeat Cycle** and press **PLAY**.

4) Use the **+** and **-** buttons to adjust the value and press **PLAY** to confirm.

2. You can choose the length of time intervals between the A-B slot cycles playback, from 1 to 10 seconds. The default value is 1 second.

 
 
 
To set up the **interval** between A-B cycles:

1) During the playback, press and hold **PLAY** for two seconds. The Options menu will appear.

2) By using the **NEXT** and **PREVIOUS** buttons, find **Repeat Settings** and press **PLAY**.

3) By using the **NEXT** and **PREVIOUS** buttons, choose **Replay Interval** and press **PLAY**.

4) Use the **+** and **-** buttons to adjust the value and press **PLAY** to confirm.



3. To set up the **A-B** repeating slot:

1) During the playback, press and hold **PLAY** for two seconds. The **Options** menu will appear.

 
2) By using the **NEXT** and **PREVIOUS** buttons, choose **Repeat Settings** and press **PLAY**.

3) By using the **NEXT** and **PREVIOUS** buttons, choose **Repeat Mode** and press **PLAY**.

4) The display will switch back to the Playback window. The **A letter** on the screen will start flashing. Press **NEXT** to select the starting point of A-B repeating slot.

5) The **B letter** on the screen will start flashing. Listen to the recording and press **NEXT** to select the final point of A-B repeating slot.


6) The A-B repeating slot will start playing in a few seconds (depends on **Replay Interval** settings). Press **PLAY** to exit **Repeat Mode**.



## HARD RESET

Press and hold the **POWER** button for 10 seconds. You will see the "WELCOME" message and the device will turn ON.

 **HARD RESET** does not affect the files stored in the internal memory.





## MENU OPTIONS

### RECORDINGS

Press **NEXT** or **PREVIOUS** to find **Recordings**.

Press **PLAY** to enter the **Recording** menu.

 
 
 
There are options:

1. Recordings Library
2. Recording Format
3. Bitrate
4. Mic Sensitivity
5. Recording Monitor
6. Autosave
7. VOR Mode
8. Auto Recording

#### 1. Recording Library

In the **Recordings** menu, find the **Recordings Library** by pressing **NEXT** and **PREVIOUS** and press **PLAY**.

If there are no saved recordings, the **No Voice Recordings Found** notification will appear on the screen, and the system



will get back to the **Recordings** menu.

If there are some saved recordings, you will see a full list of all saved recordings.

## 2. Record Format

In the **Recordings** menu, select the **Recording Format** by pressing **NEXT** and **PREVIOUS** and press **PLAY**.

- WAV (WAV files are far larger than MP3 files, however, they produce better audio quality and are recommended for musical recordings.)
- MP3 (MP3 files are smaller in size, but they reduce the sound quality and are recommended for long dictation or conversation recordings.)

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

## 3. Bitrate

The bitrate level defines the recording quality. The bigger the number is, the better the recording quality of the audio file is restored, and the greater space is occupied by the audio file.

The options displayed in this menu depend on the chosen recording format (please refer to the previous section of the manual).

For the WAV format, there are 256, 512, 768, 1024 and 1536 kbps.  
For the MP3 format, there are 32, 64, 128 and 192 kbps.

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.  
After you press **PLAY**, the system will save the settings and get back to the previous menu section.

#### 4. Mic Sensitivity

This option defines the microphone sensitivity. The "default" level of the Mic sensitivity is 7. However, to record a loud source from a close distance requires making an input gain setting lower. Adjust the gain of the microphone noticing any distortion in records.

There are 8 options:

- Grade 0
- Grade 1
- Grade 2
- Grade 3
- Grade 4
- Grade 5
- Grade 6
- Grade 7

Grade 0 is the less sensitive level, while Grade 7 is the most sensitive.  
Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

## 5. Recording Monitor

There are 2 options:

- On
- Off

When ON, you can use earphones to listen to what it is being recorded. It is used to evaluate whether the recording quality and recording settings are ideal for the current environment.

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

## 6. Autosave

You set up a time of recording. If exceeded by time, the file is autosaved, and the system creates the next one without time and sound losses.

There are five options:

- 0 minutes
- 30 minutes
- 60 minutes

- 90 minutes
- 120 minutes

If 0 minute is selected, the recording will be automatically saved when the file size reaches the 2G.

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and the **PLAY** button to select the corresponding option.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

## 7. VOR Mode


There are 3 options:

- VOR On/Off
- VOR Sensitivity
- VOR Delay

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY**.

### VOR On/Off:

When the Voice Operated Recording (VOR) mode is ON, the device will record only noises. If no noise is detected, it will not record to reduce blank time and save storage

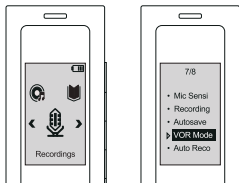

space. You can start recording manually or in Auto-mode (please refer to the corresponding section below of this manual). You will have to press the **REC** button to save the recording when it's done.

### There are 2 options:

- Off
- On



Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

### VOR Sensitivity

This option defines the microphone sensitivity. Adjust the gain on the microphone to reduce distortion.

- 0
- 1
- 2
- 3
- 4

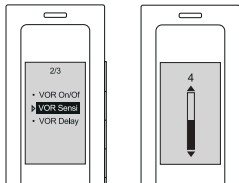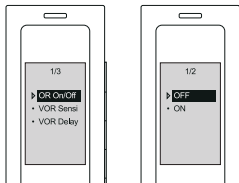

- 5
- 6
- 7

0 is the less sensitive level, while 7 is the most sensitive. Use the **+** and **-** buttons to set the value and press **PLAY** to select the corresponding option.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

## VOR Delay

This option sets the length of time for which the external sound is continuously recognized as a condition to start the recording in VOR mode. The default setting is 3 seconds.

 
There are options from 0 to 10.

Use the **+** and **-** buttons to set the value and press **PLAY** to select the corresponding option.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

## 8. Auto Record

The **Auto Record** function enables the **X200** to start and stop the recording automatically for the previously settled period. The scheduled recording can be performed in the VOR mode to save the disc space. (Please refer to



the Manual's corresponding section for details.)

There are options:

- Auto Record on/off
- Start time
- End time
- Auto Record Cycle

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

### **Auto record on/off**

There are two options:

- Off
- On

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option. After you press **PLAY**, the system will save the settings and get back to the previous menu section.



## Start Time

Use the **+** and **-** buttons to adjust HOURS (HH).

Use the **NEXT** button to switch to MINUTES (MM). You can press **NEXT** again to get back to the HH settings.

Use the **+** and **-** buttons to adjust MINUTES (MM).

Press **PLAY** to confirm.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

## End Time

Use the **+** and **-** buttons to adjust HOURS (HH).

Use the **NEXT** button to switch to MINUTES (MM). You can press **NEXT** again to get back to the HH settings.

Use the **+** and **-** buttons to adjust MINUTES (MM).

Press **PLAY** to confirm.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

## Auto Recording Cycle

There are three options:

- Once
- Daily (alarm will play each day)
- Working Days (alarm will play from Monday to Friday)

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

### **Once**

- If you choose the Once option, you will need to adjust the day in the calendar.
- Use the **+** and **-** buttons to adjust the YEAR and press **NEXT** to switch to MONTH.
- Use the **+** and **-** buttons to adjust the MONTH and press **NEXT** to switch to DAY.
- Use the **+** and **-** buttons to adjust the DAY and press **PLAY** to confirm.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

## SETTINGS

In the **Main Menu**, choose **Settings** by pressing **NEXT** and **PREVIOUS**. Press **PLAY** to enter the **Settings Menu**.

There are options:

1. **Standby Mode**
2. **Backlight**
3. **Date and Time**
4. **Password switch**
5. **Change Password**
6. **Language**
7. **Information**
8. **Format Device**
9. **Factory Settings**

### 1. Standby Mode

In the **Settings** menu, find the **Standby Mode** by pressing **NEXT** and **PREVIOUS** and press **PLAY**.

This function is used to program the period after which the DICTOPRO X200 will go to Standby mode automatically.

There are options from 0 to 99 minutes. Use the **+** and **-** buttons to adjust the value and press **PLAY** to confirm. After you press **PLAY**, the system will save the settings and get back to the previous menu section.

## 2. Backlight timer

There are options:

- 10 seconds
- 30 seconds
- 1 minute
- Always on

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option. After you press **PLAY**, the system will save the settings and get back to the previous menu section.

## 3. Date and Time

This function is used to set up the correct date and time. It is critical to use the correct data, as the time settings will affect the timestamps on the recordings.

In the **Settings** menu, select **Date and Time** by pressing **NEXT** and **PREVIOUS** and press **PLAY**.

There are options:

- Set Time
- Set Date

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

### Set Time

Use the **+** and **-** buttons to adjust HOURS (HH).

Use the **NEXT** button to switch to MINUTES (MM). You can press **NEXT** again to get back to the HH settings.

Use the **+** and **-** buttons to adjust MINUTES (MM).

Press **PLAY** to confirm.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

### Set Date

Use the **+** and **-** buttons to adjust YEAR (YY).

Use the **NEXT** button to switch to MONTH (MM). You can press **NEXT** again to get back to the HH settings.

Use the **+** and **-** buttons to adjust MONTH (MM).

Use the **NEXT** button to switch to DAY (DD). You can press **NEXT** again to get back to the HH settings.

Use the **+** and **-** buttons to adjust DAY (DD).

Press **PLAY** to confirm.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

#### 4. Password Switch

This option is used to protect the X200 with a 4-digit password. By default, this option is OFF.

In the **Settings** menu, find **Password Switch** by pressing **NEXT** and **PREVIOUS** and press **PLAY**.

There are options:

- ON
- OFF

With this function ON, you will need to input a 4-digit password before you enter the system and when connecting to the computer. By default, the pre-installed password is 0000.

#### 5. Change Password

The Password Switch should be turned ON before making adjustments (please refer to the previous Menu section).

This option is used to setup the password. To change the password you will need to input the old password first. By default, the pre-installed password is 0000.

Use the **NEXT** and **PREVIOUS** buttons to navigate the **Settings** menu and press **PLAY**.

Use **+** and **-** buttons to enter the digits of the Old Password and press **PREVIOUS** to switch between digits. Press **PLAY** to confirm.

The recorder will ask to enter a new password.

Use **+** and **-** buttons to enter the digits of the New Password and press **PREVIOUS** to switch between digits. Press **PLAY** to confirm.

## 6. Language

After changing the language, all text warnings and menu options will be displayed in a new language. The changes will be applied instantly.

In the **Settings** menu, find **Language** by pressing **NEXT** and **PREVIOUS** and press **PLAY**.

There are 17 languages installed.

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding language.

## 7. Information

This section contains the data about your DICTOPRO X200, such as Model, software version, etc.

In the **Settings** menu, find **Information** by pressing **NEXT** and **PREVIOUS** and press **PLAY**.

There are options:

- Player Information
- Disk Space

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

After choosing one of the options, you will see the message on the screen. It will be displayed for 5 seconds. Then DICTOPRO X200 will automatically get back to the previous menu.

## 8. Format Device

This option will format the disk and erase all the data on the device. Please make sure to back up all important files to avoid any loss.

In the **Settings** menu, find **Format Device** by pressing **NEXT** and **PREVIOUS** and press **PLAY**.

There are options:

- Yes
- No

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

### Yes

The formatting will start immediately. It takes a few seconds depending on the number of files being stored.

### No

The Player will automatically get back to the previous menu.

## 9. Factory Settings

This option restores X200 back to the factory settings. In case of misuse or confusion, this function helps get DICTOPRO X200 back to its initial state.

Restoring back to the Factory Settings does not affect the files stored in the internal memory.



However, we recommend backing up all important files to avoid any loss. In the **Settings** menu, find **Factory Settings** by pressing **NEXT** and **PREVIOUS** and press **PLAY**.

There are options:

- Yes
- No

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

### **Yes**

The restoring will start immediately. It takes a few seconds.

### **No**

The Recorder will automatically get back to the previous menu.

## **MUSIC**

Find **Music** by pressing **NEXT** and **PREVIOUS**. Press **PLAY** to enter the **Music** menu.

There are options:

- 1. Last played**
- 2. All Songs**
- 3. Artists**
- 4. Albums**

### **1. Last played**

This option will immediately turn on the last played track.

## 2. All songs

This option displays the full list of all audio files that are transferred to the DICTOPRO X200 memory, except recorded ones.

In the **Music** menu, select **All songs** by pressing **NEXT** and **PREVIOUS** and press **PLAY**.

### Audio files

Use the **NEXT** and **PREVIOUS** buttons to navigate the list of files and press **PLAY** to select the corresponding music file. The Recorder will start playing the chosen audio file immediately and will switch to the next one in the list.

### Additional playback options

During the playback, press and hold **PLAY** for 2 seconds. The Additional Playback menu will be displayed. There are 5 options:

- Play Mode
- Sound Settings
- Repeat Settings
- Delete
- Delete all

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to enter.

### Play Mode

There are 4 options that will define the repeat cycle of the playback mode:

- Repeat Off
- Repeat 1
- Repeat All
- Shuffle

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

### Sound Settings

This section defines the audio parameters of the playback. There are two options:

- Equalizer
- Playback speed

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to enter.

### Equalizer

There are options:

- Off
- Rock
- Funk
- Hip hop
- Jazz
- Classical

#### - Electronic

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option. After you press **PLAY**, the system will save the settings and get back to the previous menu section.

### Playback speed

This option allows to set up the playback speed. The default speed rate is **+0**. There are 17 speed levels, from **-8** to **+8**

Use the **Volume+** and **Volume-** buttons to change speed and press **PLAY** to select the corresponding option.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

### Repeat Settings

This section allows to adjust the repeat options. There are three options:

- Repeat Mode
- Repeat Cycle
- Replay Interval

### Repeat Mode

This section allows to set up the A-B repeating slot.

Use the **NEXT** and **PREVIOUS** buttons to find **Repeat Mode** and press **PLAY**.

The display will switch back to the Playback window. The **A letter** on the screen will start flashing. Press the **PREVIOUS** button to select the starting point of A-B repeating slot.

The **B letter** on the screen will start flashing. Listen to the recording and press the recording and press the **PREVIOUS** button to select the final point of A-B repeating slot.

The A-B repeating slot will start playing in a few seconds (depends on the **Replay Interval** settings). Press the **PLAY** button to exit the repeating mode.

## Repeat Cycle

You can choose how many times to reproduce the A-B slot, from 1 to 10. The default value is 5.

To set up the number of A-B cycles:

Use **NEXT** and **PREVIOUS** buttons to navigate to **Repeat Cycle** and press **PLAY**. Use the **+** and **-** buttons to adjust the value and press **PLAY**.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

## Replay Interval

You can choose the length of intervals between the A-B slot cycles, from 1 to 10 seconds. The default value is 1 second.

To set up the interval between A-B cycles:

Use the **NEXT** and **PREVIOUS** buttons to navigate to **Replay Interval** and

press **PLAY**.

Use the **+** and **-** buttons to adjust the value and press **PLAY**.

After you press **PLAY**, the system will save the settings and get back to the previous menu section.

## Delete

**Note:** Once a file is deleted, you CAN NOT restore it.

This option allows to delete the file which is being reproduced at this moment. Use the **NEXT** and **PREVIOUS** buttons to find this option and press **PLAY**.

There are options:

- Yes
- No

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

### Yes

The file, which is being reproduced, will be deleted immediately.

### No

The Recorder will automatically get back to the previous menu.

## Delete all

**Note:** Once the files are deleted, you CAN NOT restore them.

This option allows to delete all the files (except recordings), which are stored in X200 internal memory. Use **NEXT** and **PREVIOUS** buttons to choose this option and press **PLAY**.

There are options:

- Yes
- No

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding option.

#### **Yes**

All files in the library will be deleted immediately. It may take a few seconds.

#### **No**

The Recorder will automatically get back to the previous menu.

### **3. Artists**

This option displays all audio files that are transferred to the DICTOPRO X200 memory, sorted by folders and named after the artist.

There will be the **Unknown Artist** folder for the files without the information about the artist.

### **4. Albums**

This option displays all audio files that are transferred to the DICTOPRO X200 memory, sorted by folders and named after the albums.

There will be the **Unknown Album** folder for the files without the information about the album.

## FOLDERS

This option will display all the folders and files stored in X200 internal memory. Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding file or folder. Press **BACK** to return to the previous Menu section.

## EBOOK

This section allows to read/view text files, stored in X200 internal memory. The acceptable format is TXT only. Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to select the corresponding file. Use the **NEXT** and **PREVIOUS** buttons to scroll the pages. Press **BACK** button to return to the previous menu section.

Reopening of the file. The next time you open the same TXT file, it will be opened on the page you left it.



## TROUBLESHOOTING

Problem	Solution
<b>Not powering on</b>	Make sure the DICTOPRO X200 is fully charged. Charge for 2 hours, if necessary.
<b>Files cannot be transferred to the computer</b>	Make sure you are using the Micro-USB <b>data</b> cable. Ordinary charging cables do not support the data transfer. Make sure the computer is not protected with firewall systems that prevent or block the data transfer. Make sure the Recorder is not locked with a password.
<b>Settings are not working properly</b>	Restore the X200 back to the Factory Settings. Set up the desired options again.
<b>File is not supported</b>	Check if the File is supported by DICTOPRO X200. Restore the Recorder back to the Factory Settings.

**Problem****Solution****Disk error**

Transfer all files from DICTOPRO X200 to your computer. Format the device.

**Stuck on the  
Welcome screen**

If the device stuck on any kind of screen, you can make HARD RESET. HARD RESET does not affect the files stored in the internal memory. Press and hold the POWER button for 10 seconds.

**Wrong password/  
Forget the password**

Turn the recorder OFF, then turn it ON again. Use master-password 9999. Press and hold the PLAY button for 3 seconds. After entering the system this way, the password will be automatically reset to 0000 and the Password mode will be OFF.

# MAINTENANCE

## CHARGING

DICTOPRO X200 is enabled with the rechargeable Li-ion Battery. One full battery charge provides up to 17 hours of recording time.

To charge the Recorder, plug one end of the supplied cable into the Micro-USB charging port. Plug the other end of the charging cable into a standard USB port. It takes up to 2 hours to charge it fully.

Be sure to use the 5V DC, 0.5-1A adapter or charger. Using a power source with lower power will increase the overall charging time.

When not in use, unplug X200 from the charging cable and the cable - from the power source.

If the Recorder is left unused, even a fully charged battery will lose its charge over time. We recommend a full charge of the DICTOPRO X200 at least twice a month to maintain the sufficient battery life.

## SAFETY RULES

Don't disassemble or modify the Recorder for any reason. Doing this may cause it to malfunction or explosion. The damage of your device can void the manufacturer's warranty.

Make sure DICTOPRO X200 is completely dry before charging. Charging a wet device may cause serious damage.

Clean only with a dry cloth.

Avoid exposing DICTOPRO X200 to extreme temperatures (below 37°F / 3°C or above 112°F / 45°C). Extreme temperatures can cause deformation of X200 components and reduce the battery life and the lifespan of the Recorder.

## RECYCLING

The recorders can be recycled, and they should be in order to keep our planet clean. Where should you bring them?

In the **US**, there is a couple of options:

1) Best Buy has a recycling program. Just take a broken device when you visit a BestBuy store. This link will help you find the best location:

<https://www.bestbuy.com/site/store-locator/>.

2) Check for other possible locations next to you on these websites (just enter your ZIP to find a location):

<https://www.call2recycle.org>

<https://search.earth911.com>

<https://recyclenation.com/find>

<https://www.cta.tech/Consumer-Resources/Greener-Gadgets>

In **Canada**, please visit the following websites:

<https://www.return-it.ca/electronics/>

<https://www.call2recycle.ca/>

In the **UK**, please visit the links below for help:

<https://www.recycle-more.co.uk/>

<https://www.recyclenow.com/local-recycling>

## SPECIFICATIONS

<b>Battery:</b>	250mAh 3.7V, rechargeable Li-Ion Input 5V / 1A	
<b>Charging time:</b>	up to 2 hours	
<b>Charging/data port:</b>	Micro-USB	
<b>Internal memory:</b>	8GB	
<b>WAV Recording</b>	Bitrate 1536kbps	720min
	Bitrate 1024kbps	1080min
	Bitrate 768kbps	1440min
	Bitrate 512kbps	2160min
	Bitrate 256kbps	4360min
<b>MP3 Recording</b>	Bitrate 32kbps	34920min
	Bitrate 64kbps	17460min
	Bitrate 128kbps	8700min
	Bitrate 192kbps	5820min
<b>Music format:</b>	MP3/WAV/WMA/APE/FLAC	
<b>Recording format:</b>	MP3, WAV	
<b>Frequency response:</b>	20Hz-20KHz	
<b>Operating systems:</b>	Windows, MAC OS	
<b>Display:</b>	1.1 inches, 96*64 LCD	

## THANK YOU

We truly appreciate that you chose **DICTOPRO** as your trusted brand of digital voice recorders. Our team sincerely hopes you enjoy the seamless usability **DICTOPRO X200** provides. We love making our customers happy by providing true value to our products. If for any reason you are not completely satisfied with your purchase or have any questions, please let us know by visiting [www.dictopro.com/contact\\_us](http://www.dictopro.com/contact_us).

We care about our customers above all and are always here to serve you.



## 1 YEAR WARRANTY

Parts and Labor Warranty.

Please visit [www.dictopro.com](http://www.dictopro.com)  
to register YOUR product.

Manufactured by: Productech Corp

Made in China

**RoHS** **CE** **FC**  

 **WARNING:** Cancer and Reproductive  
Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

# X200

Digital Voice Recorder

