


# V100 Dictopro<sup>®</sup>

## USER MANUAL

**Thank you for choosing DICTOPRO V100 –  
Wireless keyboard!**

Expect superior quality and rugged construction combined with smooth and comfort operation.



 
PLEASE, READ  
THIS MANUAL  
BEFORE USING  
THE PRODUCT.

Micro USB port

Charging indicator

Pairing / Caps Lock indicator

## PACKAGE CONTENTS

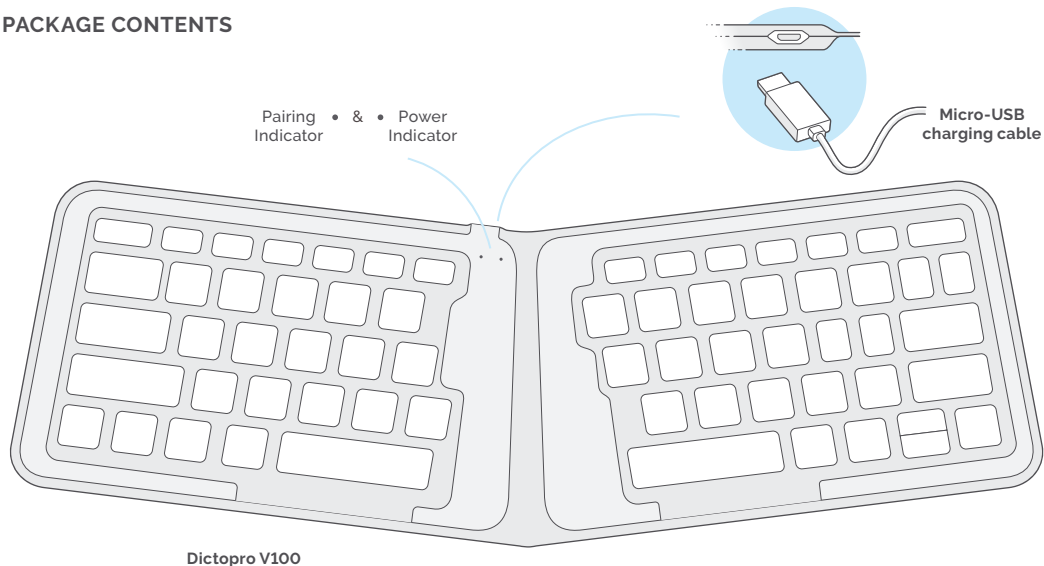

Dictopro V100

## SETTING UP YOUR V100

### POWER ON/OFF

To turn on your V100, unfold the keyboard. The "Power Indicator" will light up green for 10 seconds, and then turn off.

To turn the V100 off, fold the keyboard.



Stand case


## PAIRING

DICTOPRO V100 is enabled with 3 pairing channels and can remember 3 paired devices. One device occupies one pairing channel.


### Pairing with the 1st device

1. Unfold the keyboard. Power indicator turns green for 10 seconds, then OFF. The pairing LED will blink BLUE rapidly indicating device is in pairing mode with channel 1.
2. Using your smart device, scan/search for available devices.
3. Select DICTOPRO V100 from the device list.
4. Once V100 is successfully paired and connected, the pairing LED will turn off.

### Pairing with the 2nd device

1. Press FN+ 2. Then press FN+C, the pairing LED will light BLUE, indicating device is in pairing mode with channel 2.
2. Repeat the pairing steps 2-4 as described above.

### Pairing with the 3rd device

1. Press FN+ 3. Then press FN+C, the pairing LED will light BLUE, indicating device is in pairing mode with channel 3.
2. Repeat the pairing steps 2-4 as described above.

## RECONNECTING

After the connection is lost, the V100 will try to reconnect automatically to any previously paired devices. If reconnection does not happen automatically, please go through the "pairing" instructions above.

Reset the keyboard by pressing Fn+(left)Shift+backspace, Status LED will flash blue, then off. Turn off V100, then turn on again, all paired devices will be deleted.

## CHARGING AND BATTERY

To obtain optimum power capacity, the V100 should be charged using the provided USB cable in your packaging box. To charge the V100, plug the USB side of the cable into a power source and the Micro USB side into the port on the edge of V100. The keyboard will enter sleep mode after being idle for 30 minutes. To activate it, press any key and wait for 3 seconds.

### Power Indicator:

Press Fn +  "Power Indicator" flashes green

- 4 times:** the battery is **75% or more**
- 3 times:** the battery is **75% or lower**
- 2 times:** the battery is **50% or lower**
- 1 times:** the battery is **25% or lower**

## KEYBOARD SHORTCUTS

### CAPS LOCK

When the Caps Lock is ON, the Pairing/Caps lock indicator is green

### KEYBOARD CHANGING LANGUAGE



Samsung Android: **Shift + Space**




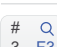
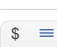

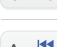
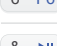
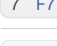
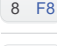


Google Android: **Ctrl + Space**


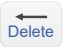






Windows: **Win + Space**

iOS 9 and above: **Ctrl + Space**

### FN+LOCK:

- 1a. Press **Fn + Shift + ** (for Windows)
- 1b. Press **Fn + ** (for iOS and Android)
2. When the **Fn** key is locked, all the function keys will be implemented directly.

FN+	IOS	ANDROID	WINDOWS
	Home	Home	N/A
	Brightness decrease	N/A	Brightness decrease
	Brightness increase	N/A	Brightness increase
	Search	Search	Search
	N/A	Mouse right key	Mouse right key
	N/A	Return	N/A
	Last track	Last track	Last track
	Play/Pause	Play/Pause	Play/Pause
	Next track	Next track	Next track
	Mute	Mute	Mute
	Mute	Mute	Mute
	Volume down	Volume down	Volume down

FN+	IOS	ANDROID	WINDOWS
 Fn Lock	Fn Lock	N/A	Fn Lock
 Delete	Delete	Delete	Delete
 Battery power display	Battery power display	Battery power display	Battery power display
 Pairing Mode	Pairing Mode	Pairing Mode	Pairing Mode
 Home	N/A	Line front	Line front
 End	N/A	Mouse right key	Mouse right key
 Pg Up	N/A	Return	N/A
 Pg Dn	Search	Search	Search

#### FN + SHIFT + IN WINDOWS SYSTEM

 Esc	Esc	 F1	F1	 F5	F5	 F9	F9
 F2	F2	 F6	F6	 F10	F10	 F11	F11
 F3	F3	 F7	F7	 F12	F12		
 F4	F4	 F8	F8				

## IMPORTANT CHARGING AND BATTERY INFORMATION

Do not charge your keyboard for longer than two hours at a time, as this will lead to a reduction of battery capacity and void your manufacturer's warranty.

Unplug the V100 from the charging cable and the cable itself from the power source when not in use.

If left unused, a fully charged battery will lose its charge over time. We recommend fully charging the V100 twice a month to ensure sufficient battery life.

Do not leave the keyboard exposed to extreme heat or cold as this will reduce the capacity and lifespan of the battery.

Do not place the keyboard close to fire as the batteries may explode. Batteries may also explode if damaged.

Make sure the keyboard is completely dry before charging.

## IMPORTANT SAFETY INFORMATION

Never attempt to disassemble or modify your keyboard for any reason. Doing so may cause the keyboard to malfunction or become combustible. Damaging the keyboard will void your manufacturer's warranty.

Do not use excessive force when operating the keyboard. Do not let the keyboard drop onto a hard surface. Do not put heavy objects on your folded or unfolded keyboard. Keep the keyboard away from sharp objects. Please do not spill any liquids on the keyboard. Clean with soft moist cloth.

Avoid exposing the keyboard to extreme temperatures (below 32F/2Co or above 104F/40Co). Extreme temperatures may cause the protective cover to warp or become deformed, and potentially reduce your V100's lifespan.

Avoid shining the LED lights in the eyes of humans and animals. Do not use the keyboard outdoors during a thunderstorm. Thunderstorms may cause malfunction and increase the risk of electric shock.

## TROUBLESHOOTING INSTRUCTIONS

### **THE LED LIGHT DOES NOT RESPOND WHEN TURNING THE KEYBOARD ON**

This can happen when the battery has lost charge. Charge the V100 for at least 30 minutes and the problem should be solved.

### **CAN'T CONNECT THE KEYBOARD TO YOUR DEVICE**

1. Turn off the V100.
2. Go to the pairing menu on your source device and delete all saved devices from the list by clicking on "Forget this device".

3. Turn the Pairing Mode on your source device OFF then back ON; DICTOPRO V100 will be deleted.
4. Power OFF your source device; turn it back on.
5. Power ON the V100.
6. Enter the device into the pairing mode and follow the instruction for connecting.

### **MY DEVICE IS ASKING FOR A PASSWORD**

If prompted for a password, enter 0000 on your device.

### **FREQUENT DISCONNECTION**

1. Ensure the V100 is fully charged.
2. Ensure that the distance between your device and the keyboard is less than 30 feet / 10 meters.
3. Ensure that nothing is blocking the signal between your device and the V100.
4. Check if the keyboard is running out of power.

## TECHNICAL SPECIFICATIONS

Operating distance	<b>30 feet / 10 meters</b>
Battery life	<b>Up to 40 hours</b>
Charging time	<b>Up to 2 hours</b>
Standby time	<b>30 days</b>
Battery capacity	<b>110mAh</b>
Charging port type	<b>Micro USB</b>
Key Life	<b>3 million clicks</b>
Unfolded Dimensions	<b>328×102×5.8 mm / 12.9×4.0×0.25 inches</b>
Folded Dimensions	<b>158×102×13 mm / 6.22×4.0×0.6 inches</b>

## THANK YOU

Thank you for choosing Dictopro as your trusted brand of wireless keyboards. We sincerely hope you enjoy the great comfort and seamless usability Dictopro provides. We love making our customers happy by providing true value with our products.

If for any reason, you are not completely satisfied with your purchase, or have any questions, please let us know by contacting us at [support@dictopro.com](mailto:support@dictopro.com) for FAQ, tips, customer care or any other possible need. We care about our customers more than anything and are always here to serve you.

### WARRANTY

**1 YEAR PARTS AND  
LABOR WARRANTY**

Please visit [dictopro.com](https://dictopro.com) to register YOUR warranty.

Contact us:  
[support@dictopro.com](mailto:support@dictopro.com)

Manufactured by Productech Corp.  
[www.productech.co](https://www.productech.co)

Dictopro

Dictopro`

# V100

Wireless keyboard!



Made in China