
# USER MANUAL

Thank you for choosing DICTOPRO D100 – Wireless keyboard!

Expect superior quality and rugged construction combined with smooth and comfort operation.

On/Off switch
Micro USB port
Connect button
Charging indicator
Status indicator

PLEASE, READ THIS MANUAL BEFORE USING THE PRODUCT.

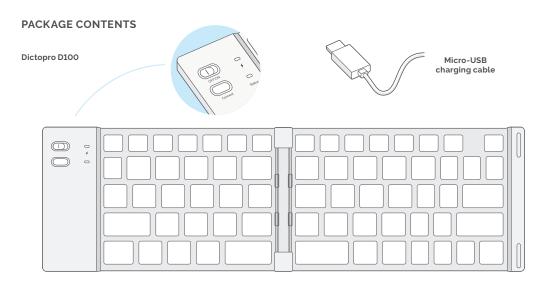



Tablet / iPad stand opening

Extend the tab to desired position to support your preffered screen angle



### **SETTING UP YOUR D100**

### POWER ON/OFF

To turn on your D100, slide the "power" switch to the ON position. The LED bulb will light up for 5 seconds, and then turn off. To turn the D100 off, slide the "power" switch to the OFF position.

### **PAIRING**

DICTOPRO D100 is enabled with 3 pairing channels and can remember 3 paired devices. One device occupies one channel.

### Paring with the 1st device

- Pairing: For pairing, press the "Connect" button.
   The pairing LED will blink BLUE rapidly indicating device is in pairing mode.
- Using your smart device, scan/search for all available devices
- 3. Select DICTOPRO D100 from the devices list.
- 4. Once D100 is successfully paired and connected, the Pairing LED will turn off.

## Paring with the 2nd device

- 1. Press FN+ 32. The Pairing LED will light BLUE, press the "Connect" button
- 2. Repeat the pairing steps 2-4 as described above.

### Paring with the 3rd device

- 1. Press FN+ 33. The Pairing LED will light BLUE, press the "Connect" button
- 2. Repeat the pairing steps 2-4 as described above.

### **KEYBOARD SHORTCUTS**

### KEYBOARD CHANGING LANGUAGE

Samsung Android: Shift + Space Google Android: Ctrl + Space Windows: Win + Space iOS 9 and above: Ctrl + Space

### FN+LOCK:

- 1a. Press Fn + Shift + a (for Windows)

  1b. Press Fn + a (for iOS and Android)
- 2. When the Fn key is locked, all the function keys will be implemented directly.

### Reset the keyboard

Press Fn + (left) Shift + Backspace, Status LED will flash blue, then off. Turn off D100, then turn on again, all paired devices will be deleted.

FN+	IOS	ANDROID	WINDOWS	FN+	109	IOS		ANDROID		WINDOWS			
~ 📾 🔪 Esc	Fn Lock	N/A	Fn Lock	+ □» = F12	Volume up		р	Volume up		Volume up			
! * 1 F1	Brightness decrease	N/A	Brightness decrease	Q §1		Pairing channel 1		Pairing channel 1		Pairing channel 1			
@ 🌣 2 F2	Brightness increase	N/A	Brightness increase	W <b>3</b> 2		Pairing channel 2		Pairing channel 2		Pairing channel 2			
# 🖒 3 F3	Home	Home	N/A	E <b>3</b> 3		Pairing channel 3		Pairing channel 3		Pairing channel 3			
\$ = 4 F4	N/A	Mouse right key	Mouse right key	Home	N/	N/A		Line front		Line front			
% 5 5 F5	N/A	Return	N/A	→ End	N/	N/A		Line end		Line end			
л Q 6 F6	Search	Search	Search	↓ PgUp	N/	N/A		Page up		Pag	Page up		
& •• 7 F7	Last track	Last track	Last track	† PgDn	N/	N/A			Page down		Page down		
* ►II 8 F8	Play/Pause	Play/Pause	Play/Pause	FN + S	FN + SHIFT + IN WINDOWS SYSTEM								
( <b>&gt;&gt;</b> 9 F9	Next track	Next track	Next track	~ 📻 🔪 Esc	Esc	# 🖒 3 F3	F3	Λ Q 6 F6	F6	( <b>&gt;&gt;</b> 9 F9	F9	+ □») = F12	
) □× 0 F10	Mute	Mute	Mute	! * 1 F1	F1	\$ = 4 F4	F4	& •• 7 F7	F7	) □× 0 F10	F10	F12	
- □) - F11	Volume down	Volume down	Volume down	@ ** 2 F2	F2	% <b>⇒</b> 5 F5	F5	* ►II 8 F8	F8	- □ - F11	F11		

### RECONNECTING

After the connection is lost, the D100 will try to reconnect automatically to any previously paired devices. If reconnection does not happen automatically, please go through the "pairing" instructions above.

### **CHARGING AND BATTERY**

To obtain optimum power capacity, the D100 should be charged using the provided USB cable in your packaging box. To charge the D100, plug the USB side of the cable into a power source and the Micro USB side into the port on the edge of D100. The keyboard will enter sleep mode after being idle for 30 minutes. To activate it, press any key and wait for 3 seconds.

### Power Indicator:

Lights red when keyboard is charging. Once D100 is fully charged, the LED will turn off.

When keyboard is on, flashes blue for 5 seconds, then turns off.

When battery level is lower than 20%, flashes blue rapidly – please charge the battery.

# IMPORTANT CHARGING AND BATTERY INFORMATION

Do not charge your keyboard for longer than two hours at a time, as this will lead to a reduction of battery capacity and void your manufacturer's warranty.

Unplug the D100 from the charging cable and the cable itself from the power source when not in use.

If left unused, a fully charged battery will lose its charge over time. We recommend fully charging the D100 twice a month to ensure sufficient battery life.

Do not leave the keyboard exposed to extreme heat or cold as this will reduce the capacity and lifespan of the battery.

Do not place the keyboard close to fire as the batteries may explode. Batteries may also explode if damaged.

Make sure the keyboard is completely dry before charging.

### IMPORTANT SAFETY INFORMATION

Never attempt to disassemble or modify your keyboard for any reason. Doing so may cause the keyboard to malfunction or become combustible. Damaging the keyboard will void your manufacturer's warranty.

Do not use excessive force when operating the keyboard. Do not let the keyboard drop onto a hard surface. Do not put heavy objects on your folded or unfolded keyboard. Keep the keyboard away from sharp objects. Please do not spill any liquids on the keyboard Clean with soft moist cloth.

Avoid exposing the keyboard to extreme temperatures (below 32F/2Co or above 104F/40Co). Extreme temperatures may cause the protective cover to warp or become deformed, and potentially reduce your D100's lifespan.

Avoid shining the LED lights in the eyes of humans and animals. Do not use the keyboard outdoors during a thunderstorm. Thunderstorms may cause malfunction and increase the risk of electric shock.

### TROUBLESHOOTING INSTRUCTIONS

# THE LED DOES NOT COME ON WHEN TURNING THE KEYBOARD ON

This can happen when the battery has lost charge. Charge the D100 for at least 30 minutes and the problem should be solved.

### CAN'T CONNECT THE KEYBOARD TO YOUR DEVICE

- 1. Turn off the D100.
- Go to the Pairing menu on your source device and delete all saved devices from the list by clicking on "Forget this device".
- Turn the Pairing Mode on your source device OFF then back ON; DICTOPRO D100 will be deleted.
- 4. Power OFF your source device; turn it back on.
- 5. Power ON the D100.
- 6. Enter the device into the pairing mode and follow the instruction for connecting.

### MY DEVICE IS ASKING FOR A PASSWORD

If prompted for a password, enter 0000 on your device.

### FREQUENT DISCONNECTION

- 1. Ensure the D100 is fully charged.
- Ensure that the distance between your device and the keyboard is less than 30 feet / 10 meters.

- 3. Ensure that nothing is blocking the signal between your device and the D100.
- 4. Check if the keyboard is running out of power.

### **TECHNICAL SPECIFICATIONS**

Operating distance	30 feet / 10 meters
Battery life	Up to 60 hours
Charging time	Up to 2 hours
Standby time	150 days
Battery capacity	110mAh
Charging port type	Micro USB
Key Life	3 million clicks
Unfolded Dimensions	293×84×7 mm / 11.5×3.3×0.3 inches
Folded Dimensions	145×84×14 mm / 5.7×3.3×0.6 inches

### THANK YOU

Thank you for choosing Dictopro as your trusted brand of wireless keyboards. We sincerely hope you enjoy the great comfort and seamless usability Dictopro provides. We love making our customers happy by providing true value with our products.

If for any reason, you are not completely satisfied with your purchase, or have any questions, please let us know by contacting us at support@dictopro.com for FAQ, tips, customer care or any other possible need. We care about our customers more than anything and are always here to serve you.



# Dictopro<sup>3</sup>











Made in China